

TASKI[®] Swingo[®] 455 E

Preparation



Ensure the machine is unplugged! Check the mains cable for damage. If cable is damaged, do not use the machine!



Plug in mains cable.



Fill the grey solution tank with clean water. Or: use the J-Flex® system to fill the tank with cleaning solution.

Operation

Switch on power switch (left

switch).



Dose cleaning product into dosing aid, then pour into the grey solution tank.



Mount squeegee - turn 3rd castor wheel of squeegee backwards - place the washers on top of squeegee holder.



Position tool carefully under the lifted brush unit.



Lower brush unit with foot pedal, then briefly pull the operating lever for brush drive to allow coupling of tool.



Lower squeegee by pushing down the pedal.



Switch on the solution supply and vacuum motor (left and middle switch).



Clean the floor.



Switch OFF all functions of the machine, then unplug the mains cable.



Drain recovery tank with the hose on the side, then drain the solution tank with the hose on the back-side of the machine.



Rinse the recovery tank with fresh water, so it can be removed from the machine.



Wipe the floater with a cloth, then clean yellow dirt sieve.



Clean solution filter.



Lift the brush unit and remove tool by turning anti-clockwise, clean it and allow to air dry.



Remove and clean squeegee, allow to air dry.



Wipe machine and the unplugged cable with moist cloth.



Flip the yellow dirt sieve and store the machine with partially open lid for ventilation (lid rests on the yellow dirt sieve).

ATTENTION: Do not use the machine before you have read and understood the operating instructions!



www.diversey.com

©2018 Diversey, Inc. All Rights Reserved. 27747 MASTER 03/18